
Removing Panel from Box

Open the box and remove the Propel panel and other items from the box.

Check the Parts List to ensure all items are present.

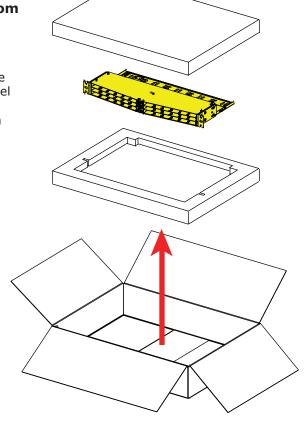

COMMSCOPE®

TC-01001551-IP · Rev A · January 2025

Quick Start



PRODUCT INFO


Installing Module or Cassette

a


Select direction of installation and position yourself accordingly. Propel adapter packs and modules can be installed from front or rear in any position where there is a space.



Red arrows show direction of installation or removal. Blue arrow shows placement of groove on rail.

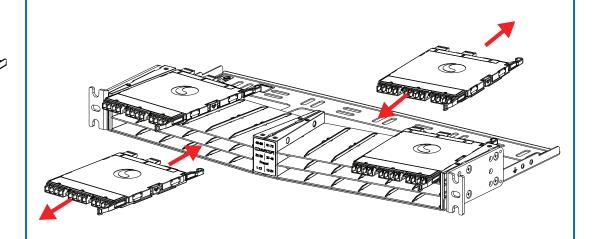



b Align grooves on bottom of adapter pack or module with rails on blade. Slide in on rails.

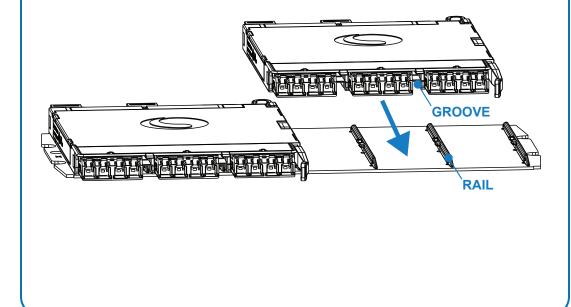


Propel Angled Panel 1RU



 

 

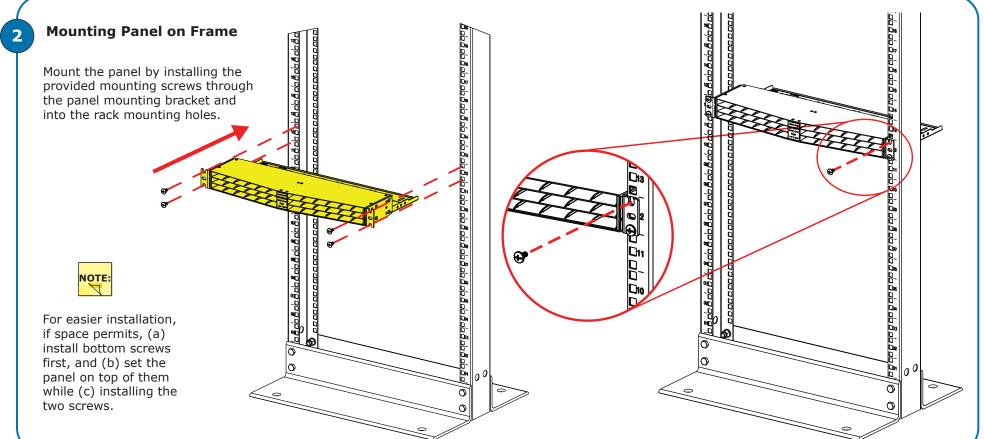

6 Installing and Routing Cables

Connect each cable to its respective cassette at the rear of the panel.

Use a hook-and-loop strap, and the slots along rear edge of the panel, to secure each cable (or group of cables) in the desired position.

b At the rear of the panel, routes cables out the back and into the vertical cable management of supporting frame.


NOTE:

Rack or cabinet mounting bracket accessories may be used for additional cable management. A full list of accessories can be found in the User Manual and on the Product Info webpage (QR code on opposing side)



Installing and Routing Patch Cords

At the front of the panel, route patch cords neatly to both sides using local routing features. Repeat for each patch cord.

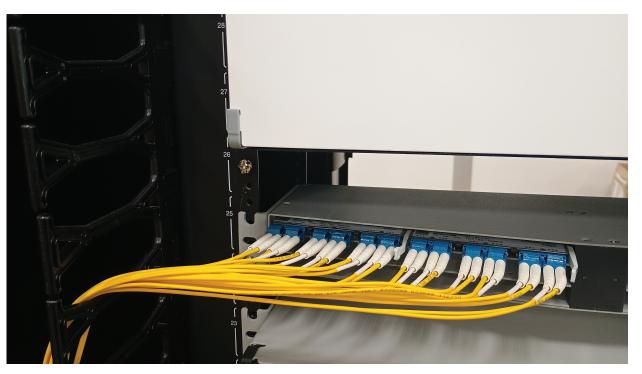



Patch cords can be grouped and held together with a hook-and-loop strap to improved cable management.