

SYSTIMAX[®] 1AMF1-6LG Mass Fusion Splice Organizer Assembly


General

The 1AMF1-6LG Mass Fusion Splice Organizer is used with the 600ALS Combination Shelf. The 1AMF1-6LG Organizer (Material ID 700006281) is individually packaged.

How to Contact Us

- To find out more about **SYSTIMAX[®]** Solutions, visit us on the web at <http://www.systemax.com/>
- For technical assistance regarding **SYSTIMAX** products:
 - Within the United States, contact your local account representative or **SYSTIMAX** technical support at 1-800-344-0223. Outside the United States, contact your local account representative or Authorized BusinessPartner.
 - Within the United States, report any missing or damaged parts to **SYSTIMAX** Customer Service in Omaha, NE, at 1-866-539-2795. Outside the United States, contact your local account representative or Authorized BusinessPartner.

POSITION SPLICE INSERT IN SPLICE ORGANIZER

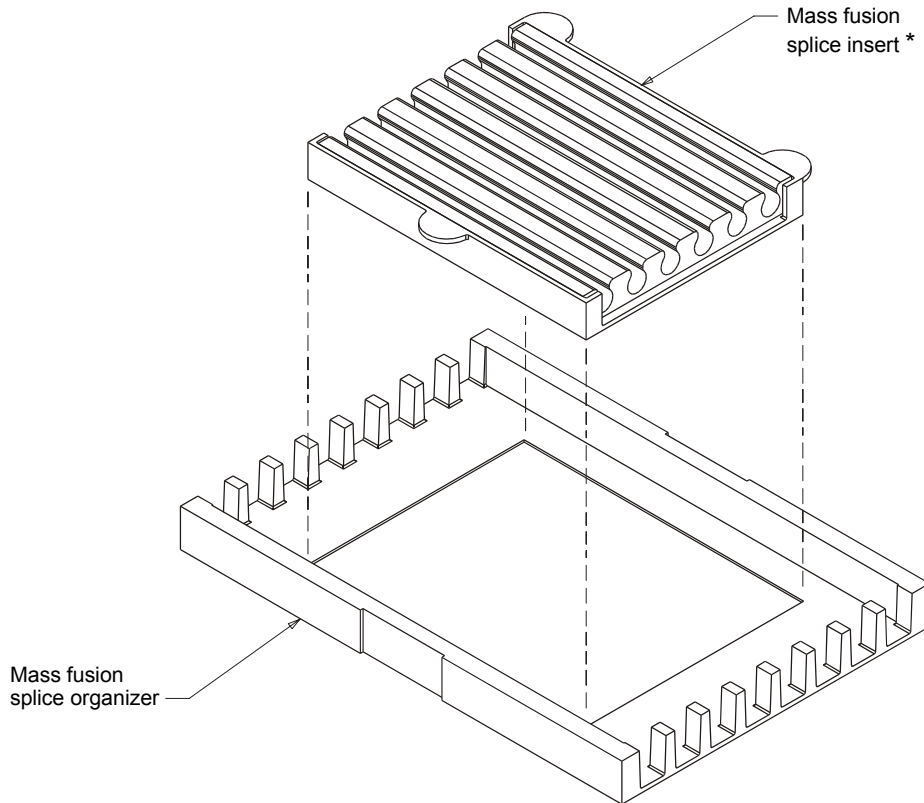

* When using the mass fusion splice organizer assembly for silicon optical bench (SiOB) coupling, the couplings can be stored in the splice organizer with or without the splice insert.

Note : Mass fusion splice organizer assembly consists of two components:

- Mass fusion splice insert (847 245 297)
- Mass fusion splice organizer (847 490 067).

1. Remove backing from mass fusion splice insert to expose adhesive.
2. Orient splice insert as shown in above figure.
3. Press splice insert into depression in mass fusion splice organizer.
4. Install mass fusion splice organizer assembly into appropriate splice tray.